HONDA **INSTALLATION INSTRUCTIONS**	Accessory **TRUNK OPENER**	Application **1999 ACCORD 2-DOOR (INCLUDES V6)**	Publications No. **AII 20047** Issue Date **OCT 1998**

PARTS LIST

Trunk opener

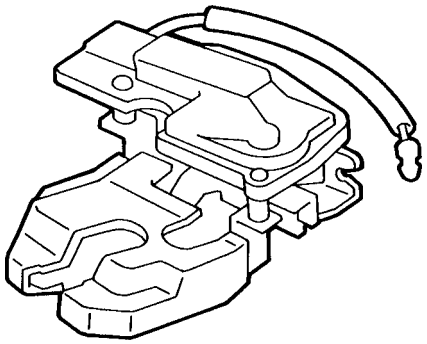

4-Pin relay

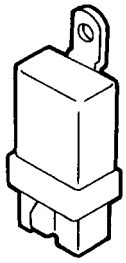

Washer-bolt

Flange nut

Wire tie with clip

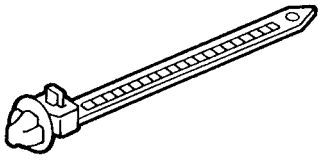

Wire tie

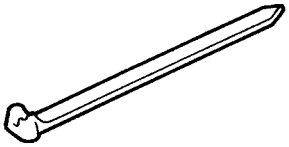

TOOLS AND SUPPLIES REQUIRED

10 mm Socket

Ratchet

Flat-tip screwdriver

Felt-tip pen

INSTALLATION

Customer Information: The installation information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

NOTE:
This Trunk Opener Kit is designed to be used exclusively with a vehicle equipped with a Security System. The trunk lid cannot be opened with this Trunk Opener Kit if the vehicle is not equipped with a Security System.

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Open the trunk lid, mark the trunk opener rod with a felt-tip pen in the area shown, and then remove the rod from the key cylinder.

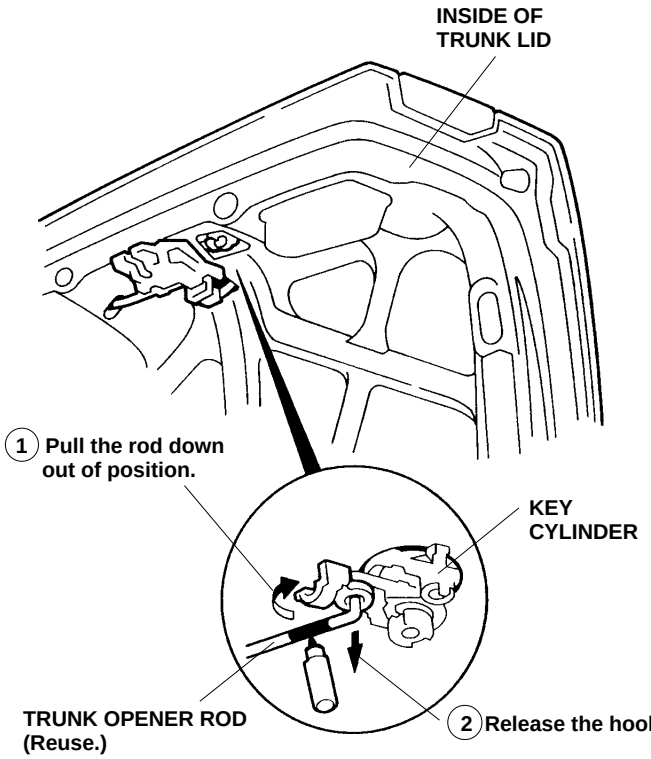

1998 American Honda Motor Co., Inc - All Rights Reserved.

4. Remove and retain the two bolts fastening the trunk opener, then pull it toward you. Disconnect the trunk opener cable, unplug the connector from the trunk opener, and remove the trunk opener and the trunk opener rod. Retain the trunk opener rod for reinstallation.

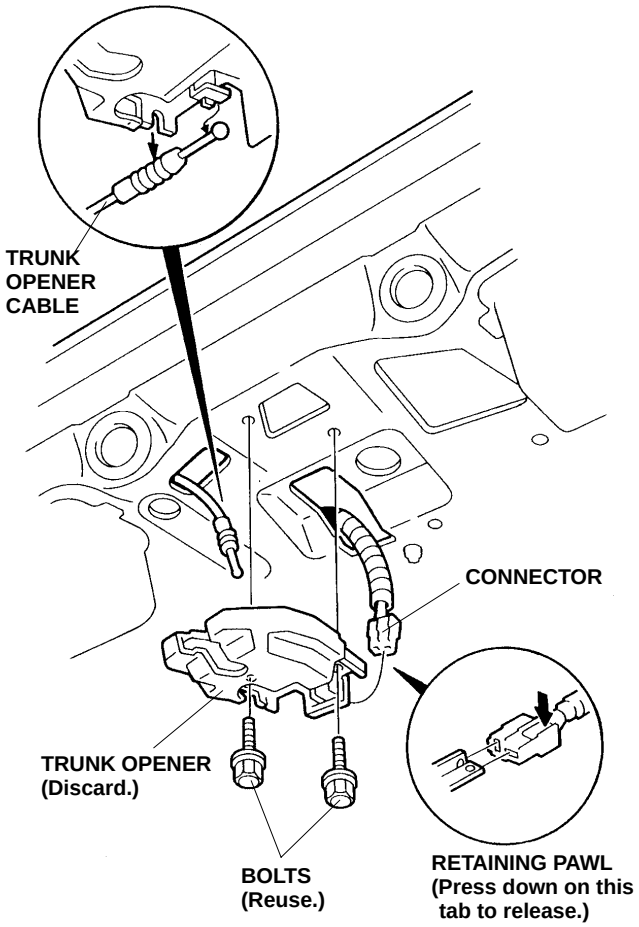

5. Inside the trunk lid, locate the terminal blue-taped to the vehicle harness. Remove the blue tape to free the terminal. Pull the terminal out through the square hole in the inner panel.

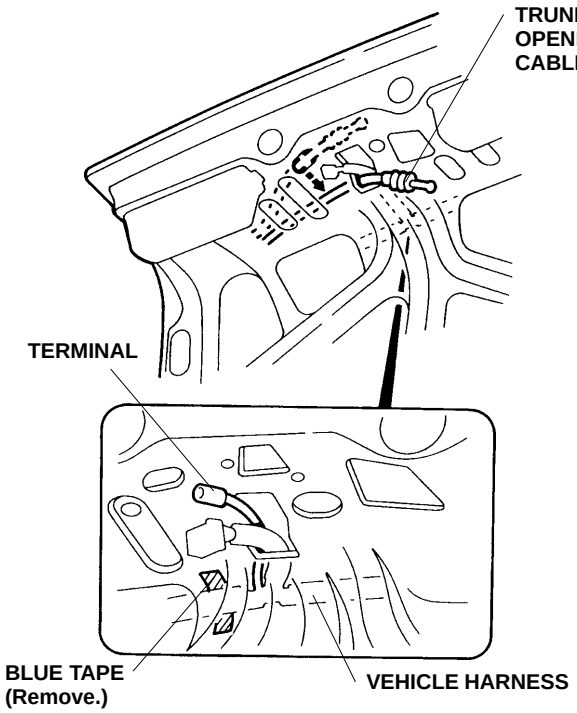

6. Reroute the trunk opener cable through the square hole in the inner panel.

7. Install the retainer clip on the new trunk opener.

8. Disconnect the trunk opener rod from the old trunk opener, and reconnect the trunk opener to the new trunk opener from the kit. Connect the unmarked end of the rod to the new trunk opener.

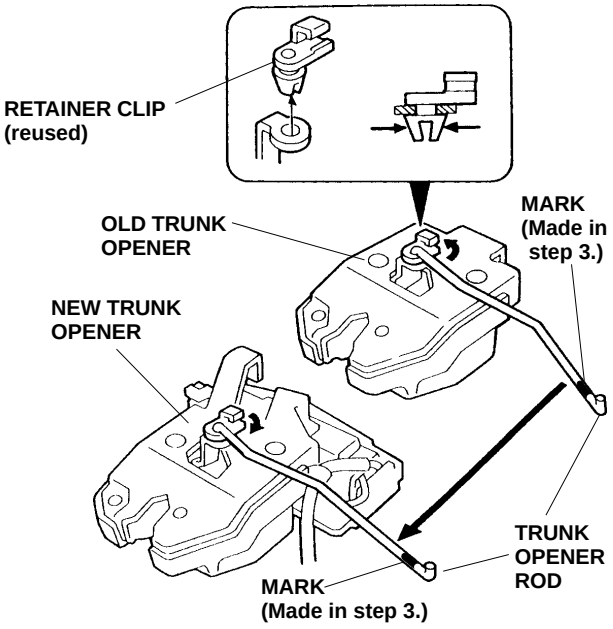

AII 20047 (9810)
1998 American Honda Motor Co., Inc - All Rights Reserved.

9. Insert the marked end of the trunk opener rod into the trunk lid through the hole in the inner panel.

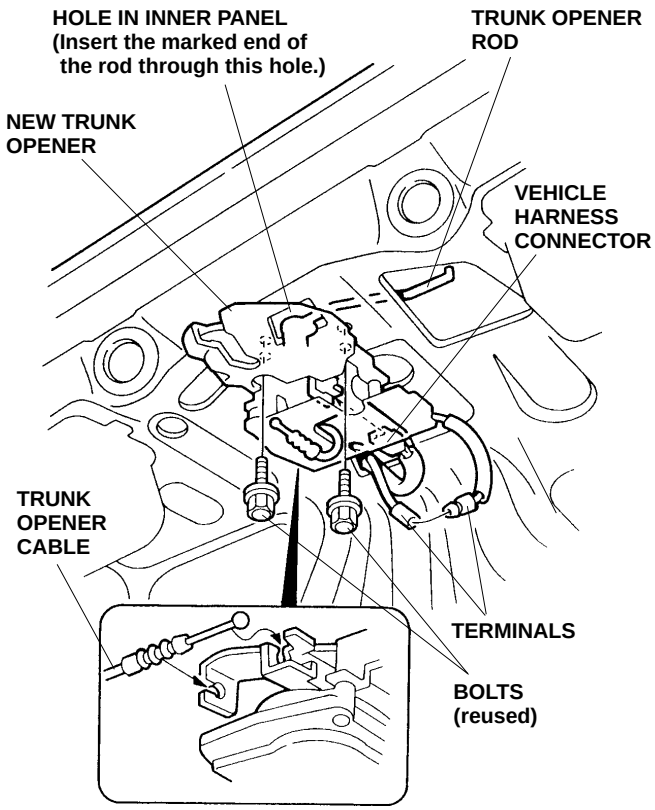

10. Connect the terminal and connector pulled out through the square hole in the inner panel (steps 5 and 6) to the new trunk opener.

11. Connect the trunk opener cable to the new trunk opener, and install the trunk opener using the two bolts retained in step 4.

12. Reconnect the trunk opener rod to the key cylinder.

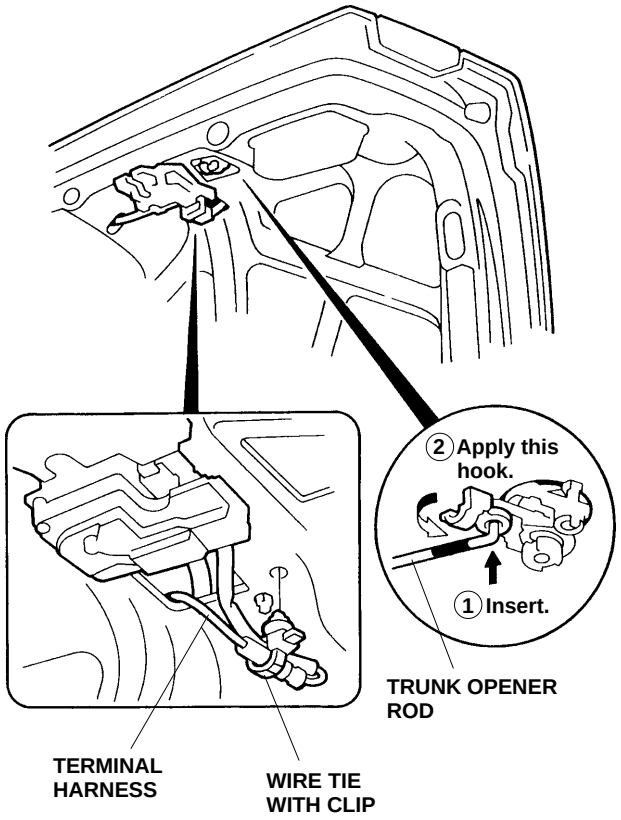

13. Attach the wire tie with clip to the terminal harness, then push the clip into the panel hole.

14. Inside the passenger's compartment, remove the front console lower cover (four retaining clips).

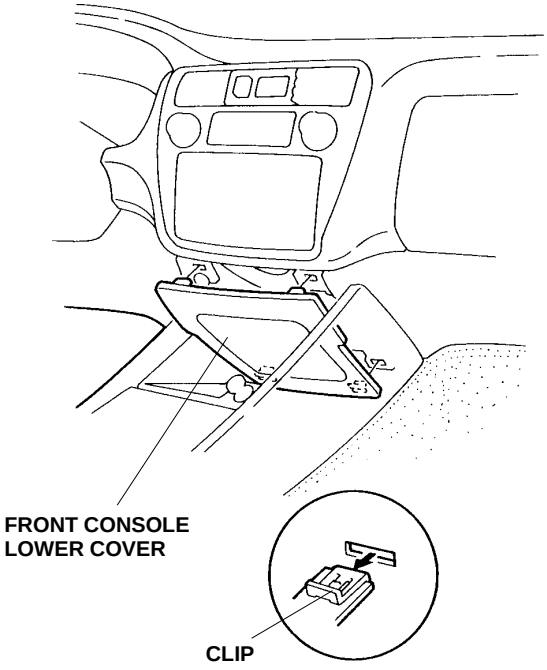

1998 American Honda Motor Co., Inc - All Rights Reserved.

If the vehicle you're working on is not equipped with an optional ashtray with cigarette lighter, go to step 16, otherwise continue with step 15.

15. Remove the ashtray with cigarette lighter, (two self-tapping screws, one connector, and four retaining clips).

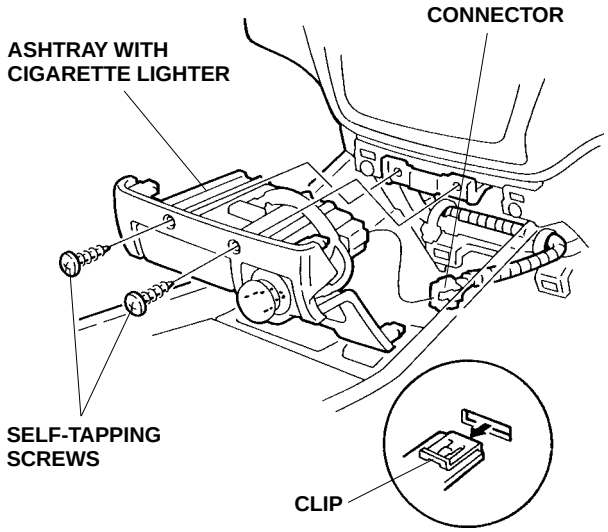

16. Remove the dashboard lower cover (two self-tapping screws, one screw, and five retaining clips).

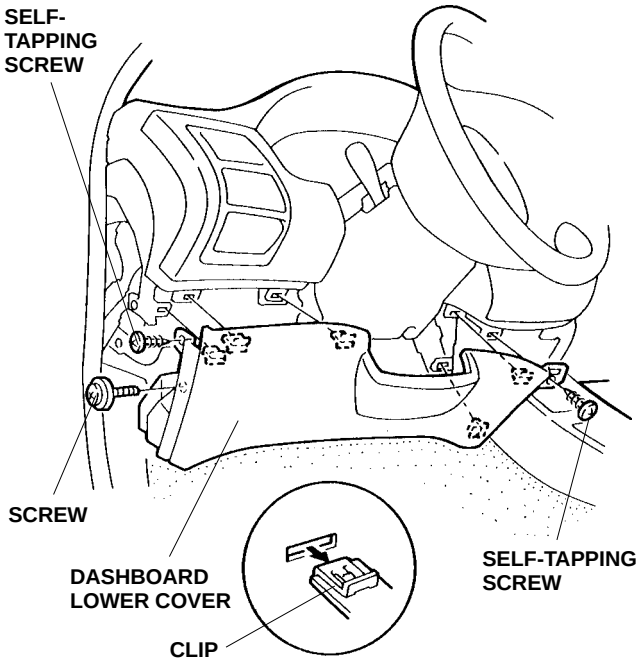

17. Position the 4-pin relay on the bracket of the control unit mounted on the inside of the dashboard lower cover, and install the washer-bolt and flange nut.

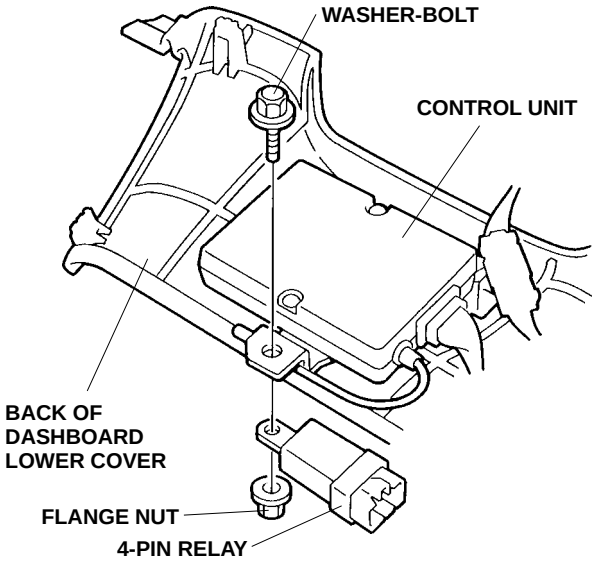

18. Locate the 4-pin connector blue-taped to the security harness. Remove the blue tape to free the connector. Plug the 4-pin connector you just freed into the 4-pin relay; then reinstall the dashboard lower cover.

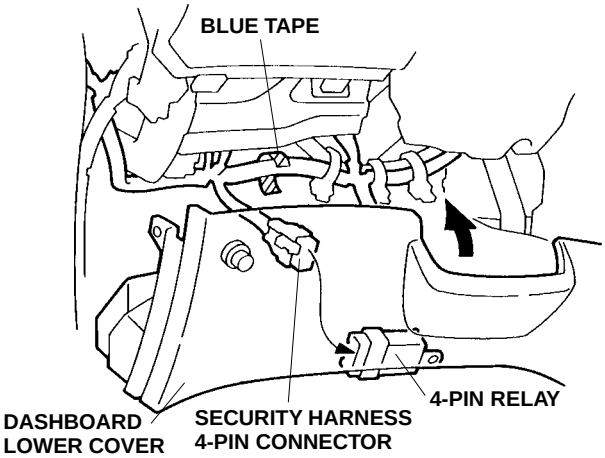

19. Check that all wire harnesses are routed properly and all connectors are plugged in.
20. Reconnect the negative cable to the battery.
21. Enter the customer's radio anti-theft code, if applicable, and reset the radio station presets.
22. Reset the clock.
23. Check operation of the trunk opener by opening the trunk with the vehicle key and with the Security System remote.

AII 20047 (9810)

1998 American Honda Motor Co., Inc - All Rights Reserved.